



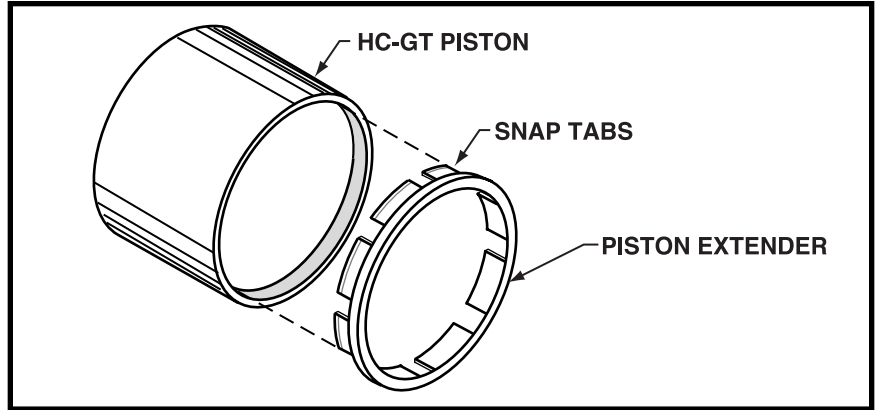

NOTICE

WHEN USING 1.25" OR 1.31" WIDE ROTORS IN CONJUNCTION WITH THE WILWOOD HC-GT CALIPER, PISTON EXTENDERS MUST BE UTILIZED.

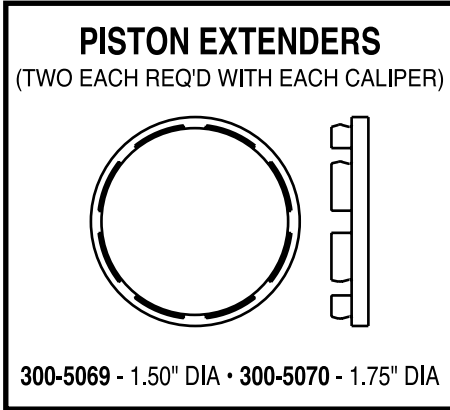

P/N 300-5069: 1.50" Diameter Piston Extender - Use with HC-GT Piston P/N 200-4833
P/N 300-5070: 1.75" Diameter Piston Extender - Use with HC-GT Piston P/N 200-4834

Installation Instructions:

For ease of installation, assure piston extender is square to the piston inside diameter before inserting. To remove extender, use a screwdriver or similar device, insert it into gaps and twist, moving gradually around the piston until extender pops free.

4700 Calle Bolero • Camarillo, CA 93012

Sales: (805) 388-1188 • Fax: (805) 388-4938

DS-262 FEB 98

Use Piston Extenders with This Combination of Components

