


NEW UNIVERSAL SOLID AXLE FLEXLINE HOSE MOUNTING KITS WELD-ON TABS or 3.00" AXLE CLAMPS

Wilwood has designed two solutions to address and simplify mounting Flexline hoses when using solid axles. Either kit will assist the installer by including all necessary parts to attach calipers to the chassis hardline.

WELD-ON TABS FLEXLINE KIT

Includes weld-on tabs to hold the chassis adapters within reach of the 12" Flexline-to-caliper connection. Choose either 45° or 90°, -3 to 1/8-27 NPT fittings at the caliper end, and mount the -3 to 3/8-24 IF through the weld-on tab to a 3/16" chassis hardline and held in place by the provided retainer clips.

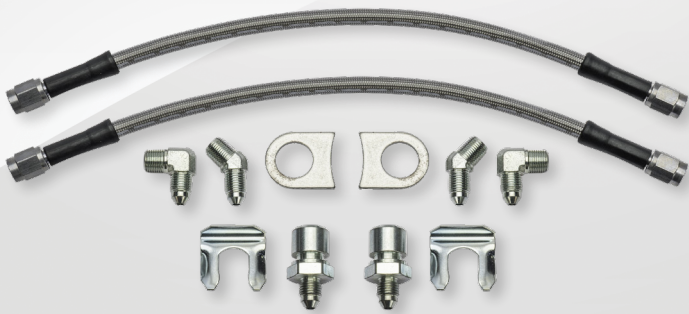

Weld-On Tab Flexline Kit
P/N [220-17288](#)

3.00" AXLE CLAMP FLEXLINE KIT

Includes 3.00" axle clamp-on brackets with line mounts to hold the 12" Flexline-to-caliper connection to a 3/16" chassis hardline. Choose either 45° or 90°, -3 to 1/8-27 NPT fittings at the caliper end, and mount the -3 to 3/8-24 IF through the mount on the axle clamp and hold in place using the provided chassis retainer clips.



3.00" Axle Clamp Flexline Kit
P/N [220-17289](#)

