## SHORT TRACK PISTON ASSEMBLY

Heat Management By



## **MAINTENANCE INSTRUCTIONS:**


- •The accompanying construction diagram is provided for informational/reference only.
- •Cleaning should be performed dry, using Scotch Bright or similar material.
- •DO NOT submerge or permit liquids to come in contact with piston.
- •Check torque on bolts after use. Re-torque to 60 in. lbs.
- •DO NOT disassemble piston. Disassembly requires the replacement of all insulation materials.
- •Please contact Wilwood Engineering if service is required.

## Ordering Information:

Designed specifically to fit Wilwood GT and GT 6000 Calipers.

- P/N: 200-3977 1.75 Diameter
- P/N: 200-3980 1.88 Diameter

Contact your local Wilwood dealer

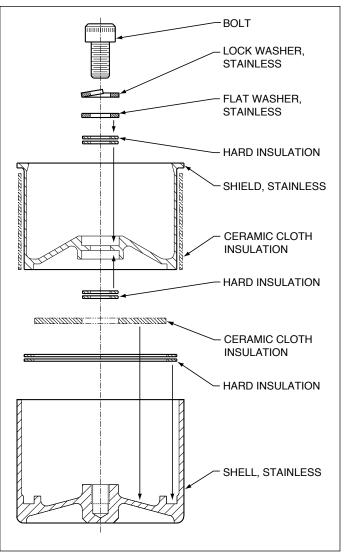

## CONSTRUCTION DIAGRAM